

MODE MEMORY

- 1. Select all the setting to be saved as a mode memory key
- 2. Press the Mode Memory Key
- 3. Select a button where the copy setting will be saved, then press Register Program



4. Using the keyboard, type in the name of the copy setting and press ok (press enlarge display to make the keyboard bigger)

The current copy mode settings will be registered. Type in the program name using the keyboard or keypad. Press ICI to delete the entered program name.		
Recall Copy Program > Register Copy Program		
1234567890-		
qvertyuiopot		
a 5 d f g h j k l : : 1		
ZXCVDNN/>Shift		
Space		
02/02/2008 10:10 Cancel OK		

5. The Copy Setting have now been saved in the mode memory

To register a program, select blank program key and touch (Register Program). Programs can be recalled or deleted.	
Recall Copy Program	
	Register Program
General Affairs	1/3
Baggar Agrowrom Edit Name	Delete Cancel OK